

8-02 ~ 04 ELECTRIC PART (ACCESSORY)

| NO | PART NAME | PART NO | Q'TY | REMARK |
|----|----------------------------|------------|------|---|
| 1 | Battery (12V) | GG1-806500 | 1 | OPT |
| 2 | Battery Holder | GG1-106810 | 1 | |
| 3 | J-Bolt | 1HJ-763172 | 2 | M6 |
| 4 | Washer, Plane | 4AE-205012 | 2 | M6 |
| 5 | Nut | 2AJ-002120 | 4 | M6 |
| 6 | Fuse Holder Ass'y | GC1-803900 | 1 | |
| 7 | Fuse (10A) | GC1-803902 | 1 | |
| 8 | Nut, Serration | 2AL-002182 | 2 | M6 |
| 9 | Relay Assy (12V) | GG1-803000 | 1 | |
| 10 | Nut | 2AJ-002120 | 3 | M6 |
| 11 | Washer, Spring | 4BE-003110 | 3 | M6 |
| 12 | Wire (F2-R) | GG1-802048 | 1 | |
| 13 | Wire Band, Harness | 900-007000 | 2 | |
| 14 | Micro Switch (Buzzer) | GC1-808002 | 1 | #A006871 and Above |
| 15 | Buzzer Ass'y (12V) | GG1-803800 | 1 | |
| 16 | Key Switch Ass'y | GC1-803500 | 1 | |
| 17 | Key | GC1-803502 | 2 | |
| 18 | Oil Lamp Ass'y | GG1-803010 | 1 | |
| 19 | Stop Switch Ass'y | GG1-803300 | 1 | |
| 20 | Screw, Pan Head | 3GE-312100 | 2 | M3, L = 16 |
| 21 | Washer, Tooth | 4CB-003110 | 2 | M3 |
| 22 | Battery Tray | GC1-803160 | 1 | |
| 23 | Wire (Battery (-) - A1) | GG1-802047 | 1 | |
| 24 | Wire (Battery (+) - Relay) | GG1-802048 | 1 | |
| 25 | Harness Ass'y (A) | GG1-802050 | 1 | Includes # 12, 13 #A006871 and Above |